


# EVEROL DOWNRIGGER NAUTILUS

## EXPLODED PARTS VIEW

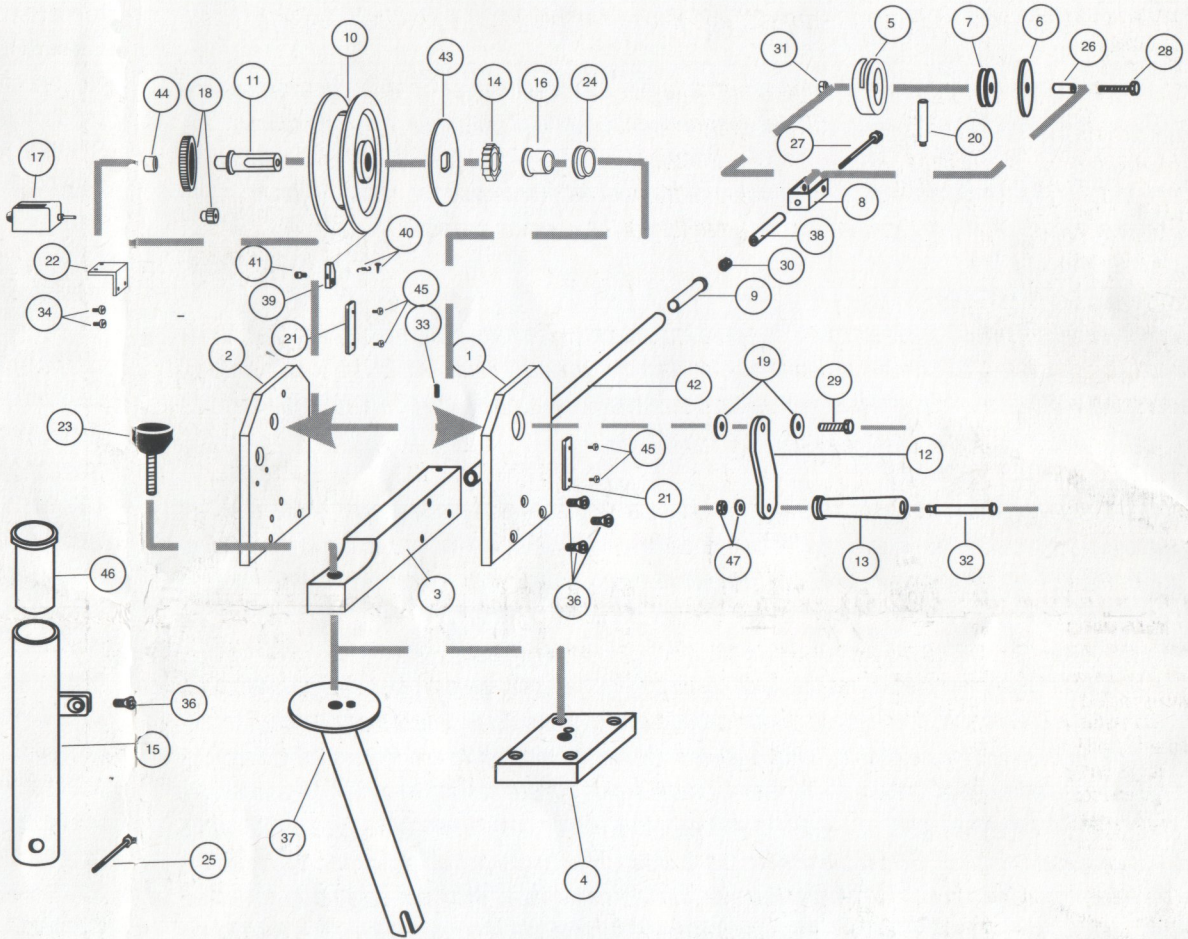

## PARTS LIST

1	Right side plate	14	Anti reverse	26	Bearing	39	Anti reverse pawl
2	Left side plate	15	Rod holder	27	5 m x 50 screw	40	Pawl spring and screw
4	Fixing base	16	Bearing	28	6 m x 30 screw	41	Pawl pin
5	Top	17	Meter counter	29	8 m x 30 screw	42	Boom
6	Top cover	18	Counter gear	30	5 m nut	43	Drag washer
7	Pulley	19	Washer	31	6 m nut	44	Bearing
8	Top holder	20	Cable guide	32	Handle shaft	45	3 m x 6 screw
9	Nylon bearing	21	Cable plate guide	33	5 m x 12 screw	46	Rod holder nylon bearing
10	Spool	22	Counter base	34	4 m x 6 screw	47	Handle nut and washer
11	Main shaft	23	Fixing screw	36	6 m x 16 screw		
12	Handle slide plate	24	Nylon bearing	37	Rod holder adapter		
13	Handle knob	25	6 m x 60 screw	38	Bearing		